ZOJIRUSHI

www.zojirushi.com

CK-BAC Ⓒ

ZOJIRUSHI

ELECTRIC KETTLE OPERATING INSTRUCTIONS
快煮電氣壺 使用說明書
전기 주전자 사용설명서
電気ケトル 取扱説明書

CK-BAC10

INDEX ／ 目錄 ／ 목차 ／ 目次

IMPORTANT SAFEGUARDS....2
PARTS NAMES AND FUNCTIONS....6
BOIL MODE....8
POUR HOT WATER....10
DISPOSE WATER....10
AUTOMATIC SHUT-OFF FUNCTION....10
CLEANING AND MAINTENANCE....11
HOW TO REPLACE THE INNER LID GASKET....11
HOW TO CLEAN THE INNER CONTAINER WITH CITRIC ACID (ACTIVATED DESCALING CLEANER)....12
REPLACEMENT PARTS & OTHER ITEMS....12
SPECIFICATIONS....12
TROUBLESHOOTING GUIDE....13

安全注意事項....14
各部位名稱和使用方法....16
燒開水....18
注水....20
倒掉剩餘熱水時....20
關於防止空燒....20
清理....21
更換內蓋墊圈....21
檸檬酸清洗方法....22
關於零件更換・另售部件....22
規格....22
認為故障時....23

안전상의 주의....24
각부의 명칭과 취급 방법....26
물을 끓인다....28
물을 따른다....30
나머지 물을 버린다....30
이상과열방지....30
손질방법....31
속 뚜껑 패킹 교환....31
구연산 세척(물때합성클리너)....32
교환부품 및 별매품....32
사양....32
고장인가 생각될 때....33

安全上のご注意....34
各部のなまえと扱い方....36
湯をわかす....38
湯を注ぐ....40
残り湯をすてる....40
空だき防止....40
お手入れ....41
内ぶたパッキンの交換....41
クエン酸洗浄....42
交換部品・別売品....42
仕様....42
故障かなと思ったとき....43

*This product is for boiling water only and does not have a Keep Warm function.
●本產品為燒水專用，不具備保溫功能。
●이 상품은 물 끓임 전용입니다. 보온기능은 없습니다.
●この商品は湯わかし専用です。保温機能はついていません。

ZOJIRUSHI CORPORATION

IMPORTANT SAFEGUARDS

BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED WHEN USING ELECTRICAL APPLIANCES, INCLUDING THE FOLLOWING:

1. Read all instructions thoroughly.
2. Avoid touching hot surfaces and do not close or clog the steam vent opening under any circumstances. The handles and knobs are provided for your safety and protection.
3. To safeguard against fire, electric shock and possible injury, keep the power cord, plugs and the appliance away from water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow the appliance to cool before adding or removing parts, and before cleaning the appliance.
6. Do not use or operate any appliance with a damaged cord or plug. If the appliance malfunctions or has been damaged in any manner, unplug the appliance and return it to the nearest authorized service facility or dealer for examination, repair or adjustment.
7. The use of accessories or attachments not recommended by the appliance manufacturer may result in fire, electric shock or other injury to persons.
8. Do not use outdoors.
9. Keep the power cord away from hot surfaces and do not let the cord hang over the edge of tables or counters.
10. Do not place on or near a heated surface such as a gas or electric stove, or in a heated oven.
11. Always use extreme caution when moving an appliance containing hot liquids.
12. Place the kettle (body) securely on the base before plugging the cord into a wall outlet.
13. Do not use the appliance for other than intended or specified purposes.
14. To protect against electrical hazard, unplug the cord before cleaning.
15. Scalding may occur if the lid is opened during the boiling cycle.

SAVE THESE INSTRUCTIONS

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

This appliance is supplied with a short power cord to reduce the risk of becoming entangled in or tripping over. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the cord should be at least as great as the electrical rating of the appliance, and a longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug was designed to fit into a polarized outlet in only one direction. If the plug does not fit fully into the outlet, do not attempt to force it or modify it in any way. Simply reverse the plug and insert. If it still does not fit, contact a qualified electrician.

IMPORTANTES MESURES DE SÉCURITÉ

Pour utiliser des appareils électriques, il faudrait toujours prendre les précautions de base, y compris les suivantes.

1. Lisez toutes les instructions.
2. Ne touchez pas les surfaces qui peuvent être chaudes. Utilisez les poignées ou les boutons.
3. Pour éviter les chocs électriques, ne plongez pas le cordon, la fiche ou l'appareil portatif dans l'eau ou un autre liquide.
4. Surveillez bien les enfants s'ils utilisent un appareil ou s'ils se trouvent à proximité d'un appareil en marche.
5. Appareils portatifs. Débranchez l'appareil de la prise de courant quand vous ne l'utilisez pas avant d'enlever ou d'installer des piéces et avant de le nettoyer. Laissez l'appareil refroidir avant de le manipuler.
   Appareils branchés à demeure. Assurez-vous que l'appareil est ARRÊTÉ quand vous ne l'utilisez pas avant d'enlever ou d'installer des pièces et avant de le nettoyer.
6. Appareils portatifs. Ne faites pas fonctionner l'appareil si le cordon ou la fiche sont endommagés, si l'appareil ne fonctionne pas correctment, s'il est tombé ou s'il a été endommagé. Confiez au service de réparation recommandé le plus proche tout examen, réparation ou réglage électrique ou mécanique de l'appareil.
7. L'utilisation d'accessoires non recommandés par le fabricant de l'appareil peut causer des blessures.
8. N'utilisez pas l'appareil à l'exterieur.
9. Ne laissez pas le cordon pendre par-dessus le bord d'une table ou d'un comptoir et assurez-vous que le cordon n'est pas en contact avec des surfaces chaudes.
10. Ne placez pas l'appareil près d'un brûleur à gaz allumé ou d'un élément électrique ou tension ou dans un four allumé.
11. Soyez très prudent en déplaçant un appareil qui contient du liquide chaud.
12. Le cas échéant, branchez toujours la fiche à l'appareil et assurez-vous que l'interrupteur de celui-ci est à la position ARRÊT (OFF) avant de brancher la fiche dans la prise. Pour débrancher l'appareil, placez l'interrupteur à ARRÊT (OFF) puis retirez la fiche de la prise de courant.
13. N'utilisez l'appareil que pour la fonction à laquelle il est destiné.
14. Pour vous protéger contre une secousse électrique, pensez à débrancher l'appareil avant tout nettoyage.
15. Si le couvercle est ouvert alors que l'eau est bouillante, il existe un risque de brûlures.

CONSERVEZ CES INSTRUCTIONS

CET APPAREIL EST UNIQUEMENT À USAGE DOMESTIQUE.

L'appareil est équipé d'un cordon court afin de réduire les risques d'enchevêtrement ou de chutes sur le cordon. Des rallonges peuvent être utilisées à condition que toutes les précautions soient prises lors de leur utilisation.
Si vous vous servez d'une rallonge, sa puissance électrique indiquée devra être égale ou supérieure à celle de l'appareil; Le cordon devra être arrangé de manière à ce qu'il ne pende pas depuis le haut d'un comptoir ou d'une table où il serait à portée de main des enfants et où il occasionnerait des accidents dus à une chute ou à un enchevêtrement. L'appareil a une prise polarisée (l'une des lames est plus large que l'autre). Pour réduire les risques de chocs électriques, la prise s'insère dans un seul sens à l'intérieur d'une prise murale polarisée. Si la prise ne s'adapte pas correctement dans la prise murale, retournez-la. Si elle ne s'adapte toujours pas, contactez un électricien spécialisé. Ne cherchez en aucun cas à modifier la prise.

IMPORTANT SAFEGUARDS

Before use

These WARNINGS and CAUTIONS are intended to protect you and others from personal injury and household damage. To ensure safe operation, please follow carefully.

WARNINGS

Do not use a power source other than 120V AC.
- Use of any other power supply voltage may cause fire or electric shock.

Use only an electrical outlet rated at 15 amperes minimum, and do not plug other devices into the same outlet.
- Plugging other devices into the same outlet may cause the electrical outlet to overheat, resulting in fire.

Do not immerse the product in water or splash it with water, and do not put it on a wet surface such as a sink.
- Doing so may cause short circuit or electric shock.

Do not fill over the Maximum Water Level Line.
- Overfilling may cause hot water to spill out, resulting in scalds.

Do not move the product or drain hot water by holding the Upper Lid.
- This may result in scalding by hot water spilling out from the Spout or Steam Vent. Always use the handle when carrying.

Do not cover the Steam Vent with anything such as a dishcloth.
- Hot water may spill out, resulting in scalds. It may also cause deformation or discoloration of the Upper Lid or breakdown of the product.

Do not allow children to use the product unsupervised. Keep it out of the reach of infants.
- Children are at risk of burns, electric shock or injury.

Do not plug or unplug the Power Cord if your hands are wet.
- Doing so may cause electric shock or injury.

Do not touch the Spout or Steam Vent.
- Doing so may cause burns or scalding. Take special precautions with children and infants.

Always dispose water by pouring it out of the spout with the Upper Lid closed securely.
- Disposing water with the Upper Lid open may cause scalding.

Do not boil anything other than water.
- Boiling tea, milk, sake or other liquids may cause bubbling or boiling over, resulting in scalds.

Do not place the product directly on a stovetop burner (gas stove), electric heater or an IH cooker.
- Doing so may cause fire.

If the blades or surface of the Power Plug become soiled, wipe them clean.
- A dirty Power Plug may cause fire.

Do not tilt the product or tip it over while on the Power Base.
- Hot water may spill from the Spout or Steam Vent.

Do not use the product if the Power Plug or Power Cord is damaged or if the Power Plug is loosely inserted into the electrical outlet.
- Doing so may cause electric shock, short circuit or fire.

Do not damage the Power Cord. Do not bend, pull, twist, fold, or attempt to modify the Power Cord. Do not place it on or near high temperature surfaces or appliances, under heavy items or between objects.
- A damaged Power Cord can cause fire or electric shock.

Do not slam the Upper Lid when closing.
- Hot water may spill out, resulting in scalds.

Do not modify the product. Only a repair technician may disassemble or repair this unit.
- Attempting to do so may cause fire, electric shock or injury. Make any repair inquiries to Zojirushi Customer Service.

Do not use the product as a cooler or place ice inside of it.
- This may cause condensation, resulting in electric shock or breakdown of the product.

Do not allow the Receptacle and Connector (metal parts) to become soiled with dust or come into contact with metal objects such as pins.
- This may cause electric shock, short circuit or fire.

Do not allow infants or children to lick the Receptacle and Connector (metal parts).
- Doing so may cause electric shock or injury. Take special precautions with children and infants.

Insert the Power Plug completely and securely into the electrical outlet.
- A loosely inserted Power Plug may cause electric shock, short circuit, smoke or fire.

Close the Upper Lid securely.
- Hot water may spill out when the product is overturned, resulting in scalds.

CAUTIONS

Do not pour hot water during the boiling process.
- Hot water can spurt out, resulting in scalds.

Unplug the Power Plug from the outlet when the product is not in use.
- Leaving the Power Plug in an outlet may cause the insulation to become damaged, resulting in electric shock, short circuit or fire.

Do not place or use the product on unstable surfaces or on surfaces that are vulnerable to heat.
- Doing so may cause fire.

Always unplug the product by holding the Power Plug, not by pulling the Power Cord.
- Pulling the Power Cord to unplug the product may cause electric shock, short circuit or fire.

Always use caution when opening the Upper Lid and avoid skin contact with steam.
- Loose water or steam may escape upon opening the Upper Lid and cause scalds.

Do not use the product near walls, furniture or beneath shelving.
- Steam or heat may damage, discolor or deform walls, furniture or shelving.

Do not use other Power Base than the one provided. Do not use the Power Base for other appliances.
- Doing so may cause malfunction or fire.

Do not hold or carry the product by the Lid Lock.
- Doing so may cause injuries or scalds.

Do not touch hot surfaces during or immediately after use.
- Touching hot surfaces may cause burns. Be especially careful with metal parts such as the Lid and the Inner Container.

Please allow the product to cool down before cleaning.
- Touching hot surfaces may cause burns.

If the Power Cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid hazards.

IMPORTANT

Do not operate the product when it is empty.
- This may burn or damage the product.

Avoid rough handling, dropping or bumping the product.
- This may cause damage or cease operation of the product.

Avoid letting steam make contact with cabinets and walls when using near or under a kitchen shelf.
- This may cause discoloration or deformation.

Allow the product to dry completely when storing the product in an area where it may freeze.
- If water left inside freeze, it may cause breakdown or malfunction.

Do not use the product where its steam may come into contact with other electrical appliances.
- The steam may cause fire, malfunction, discoloration or deformation to other electrical appliances.

Do not put ice, soup, milk, pouched food, coffee grounds, tea, or other types of food items in the product.
- The product is for boiling water only. Brewing teabags or tea leaves, cooking instant food items, or adding anything other than water to the product may cause bubbling or boiling over, resulting in scalds. This may also cause clogging of the water route, burning or corrosion of the Inner Container.

Do not drag the product or the Power Base over any surface while attempting to move.
- This may cause damage to surfaces such as countertops.

Do not use the product near a heat source.
- This may cause fire, breakdown or damage of the product.

PARTS NAMES AND FUNCTIONS

*This is a cordless electric kettle and consists of the Body and a detachable Power Base.

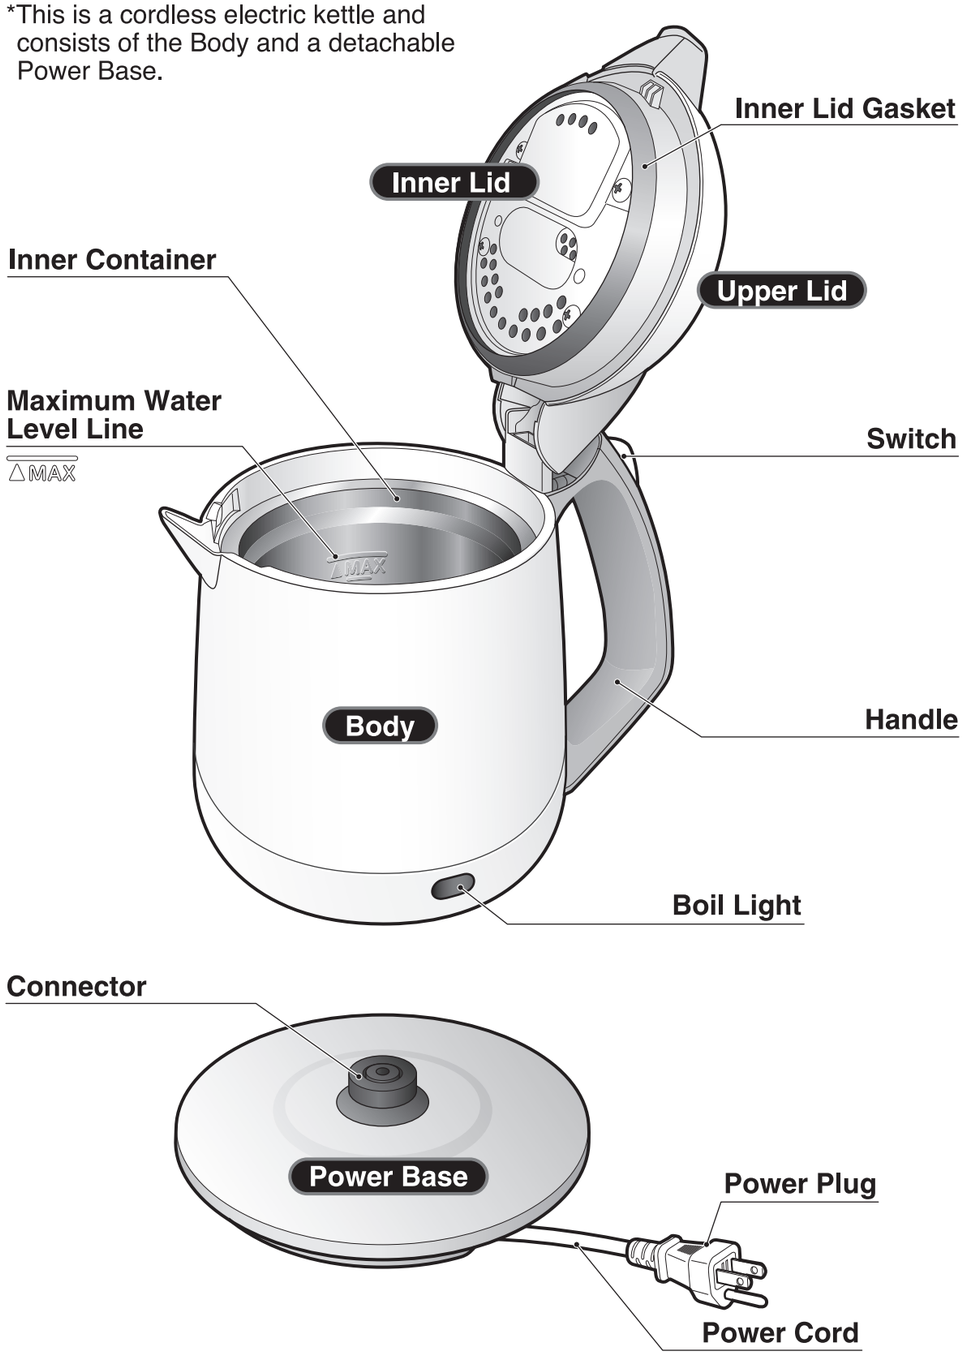

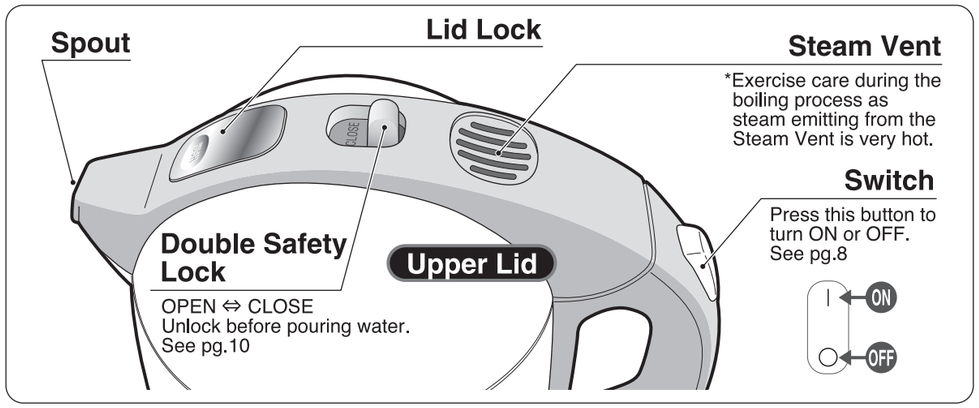
Spout
Lid Lock
Steam Vent
*Exercise care during the boiling process as steam emitting from the Steam Vent is very hot.
Switch
Press this button to turn ON or OFF. See pg.8
ON
OFF
Double Safety Lock
OPEN ⇔ CLOSE
Unlock before pouring water. See pg.10
Upper Lid

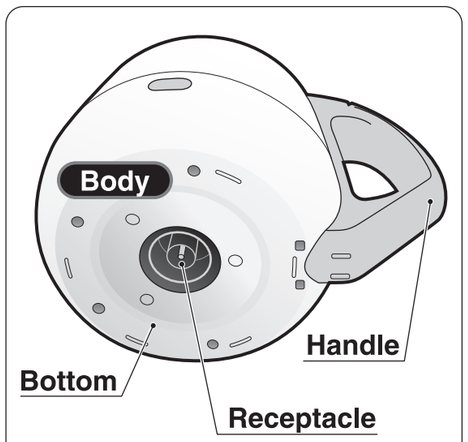

How to Open/Close the Upper Lid

To Open

❶ Press the indented area of the Lid Lock with thumb.
❷ Pull the Lid Lock up with fingers to open the Upper Lid.

To Close

Depress the Upper Lid until it clicks shut.

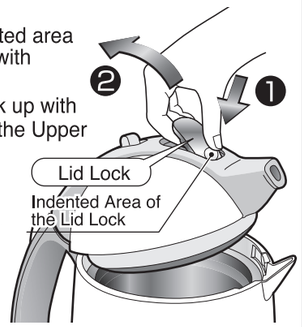

Be careful not to tip the product over.

How to Shorten/Lengthen the Power Cord

Adjust the length of the Power Cord and allow it to come out of the Power Base from one of the three openings at the bottom.

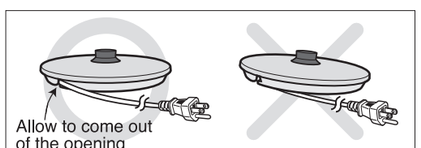

*__Do not allow the Power Base to crush the Power Cord.__ (Doing so may cause the product to tilt or tip over. Placing heavy items on the Power Cord or pinching it may damage the Power Cord and cause fire or electric shock.)

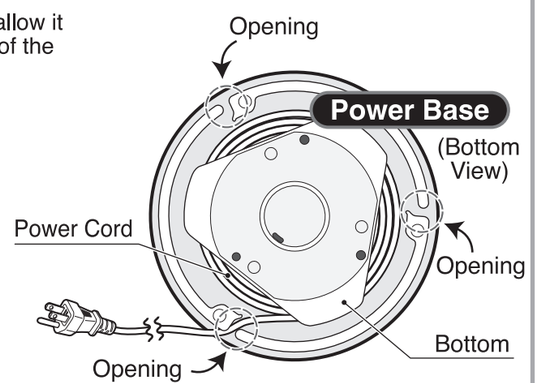

BOIL MODE

The first time you use the product or after storing it for a long period of time, boil water once and discard it before boiling water for consumption.

1 Remove the Body from the Power Base, open the Upper Lid and fill the Inner Container with water using a pitcher or other container.

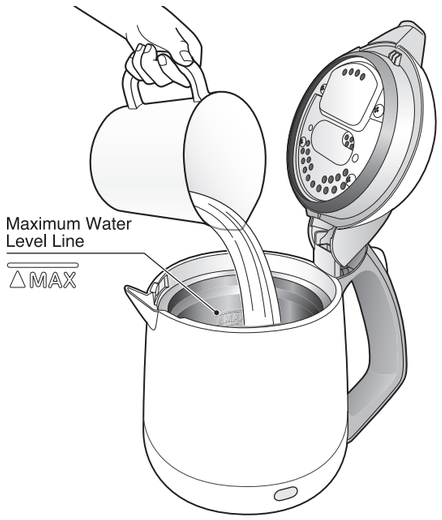

NOTES

- *Do not fill the Inner Container directly from a water faucet or place the product on a wet surface such as a sink. (Exposing the heating element directly to water may cause malfunction.)
- *Avoid splashing water on the Body. (May cause malfunction.)
- *Do not fill over the Maximum Water Level Line. (Hot water may overflow from the Steam Vent or Spout.)
- *Do not fill the Inner Container with any liquid other than water.
- *Do not use water additives such as charcoal for water purification or mineral additives. (Small particles may get clogged inside of the product.)
- *Be sure to close the Upper Lid securely. If the Upper Lid is not closed securely, the power will not switch OFF when boiling completes.
- *Do not fill the Inner Container while the Body is connected to the Power Base. (Doing so may splash water on the Power Base and cause malfunction.)

2 Close the Upper Lid and place the Body on the Power Base.

Use the provided Power Base only.

Close the Upper Lid securely until it clicks.

(Otherwise hot water may spill out from gaps other than the Spout when pouring, resulting in scalds.)

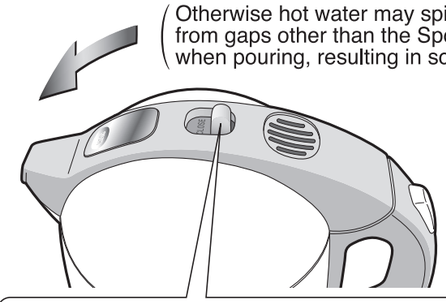

Make sure that the Double Safety Lock is at the CLOSE position.

(Hot steam may come out from the Spout if it is at the OPEN position, resulting in scalds.)

Set the Body on the Power Base correctly so that the Connector fits in the Receptacle securely.

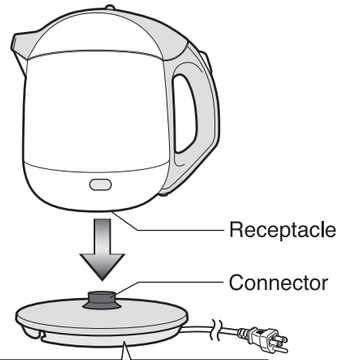

Place the Power Base on a clean, level and stable surface.

3 Connect the Power Cord and turn the Switch ON.

The first time you use the product you may notice the smell of plastic. This is normal and will gradually fade away.

❶ Make sure that the Switch is at the "○" position before connecting.

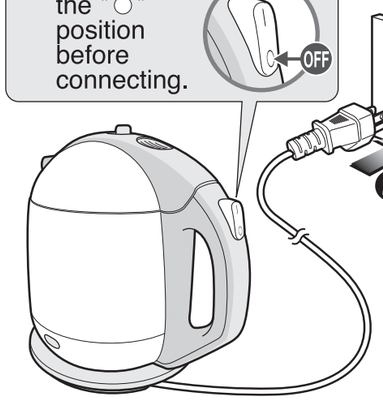

***Use only an electrical outlet rated at 15 amperes minimum, and do not plug other devices into the same outlet.**

Plugging other devices into the same outlet may cause the electrical outlet to overheat, resulting in fire.

Turn the Switch ON to begin boiling.

The Boil Light turns on.

Press the "❙" to turn ON.

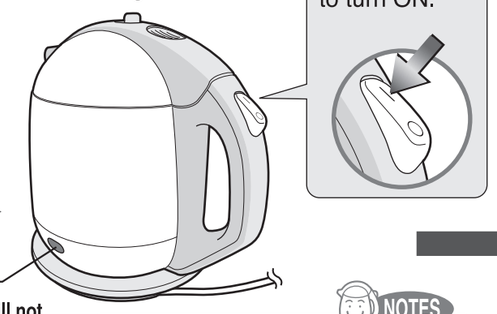

The Switch will not turn ON if the Body is not placed correctly on the Power Base.

NOTES

- *Please follow the instructions below to reduce the risk of scalding:
  - ・Do not cover the Steam Vent with a cloth.
  - ・Be careful of steam coming out from the Steam Vent.
  - ・Do not open the Upper Lid while the Boil Light is on.
  - ・Do not attempt to pour hot water during the boiling process.
  - ・Do not move the product during the boiling process.

When boiling has completed, the product automatically switches OFF.

The Boil Light turns off.

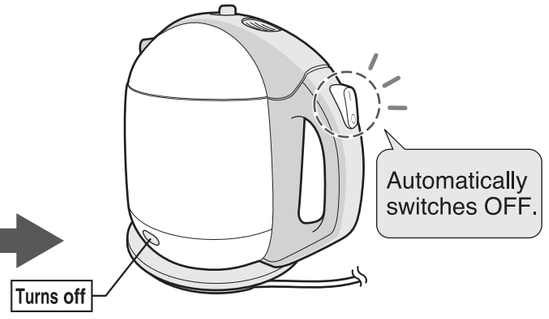

Time required to boil water:	Approx. 5 minutes 30 seconds

(At a room temperature of 68°F with the Inner Container filled to the Maximum Water Level Line with water temperature at 68°F.)

- *Press "○" to turn the Switch OFF during the boiling process.
- *This product does not have a Keep Warm function.

Be careful as the Steam Vent, Receptacle and the inside of the Handle will become hot immediately after boiling completes.

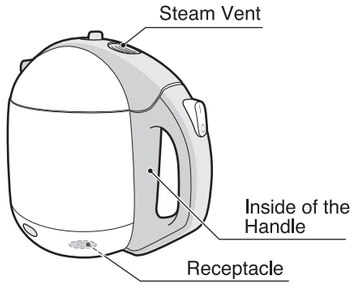

- *Unplug the Power Plug from the electrical outlet when boiling has completed.
- Take special precautions with infants and prevent them from playing with this product to avoid electric shock or injury.

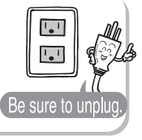

POUR HOT WATER

Wait until boiling completes to pour hot water.

Make sure that the Switch is OFF at the "○" position, then lift the Body from the Power Base by holding the Handle and tilt it to pour hot water.

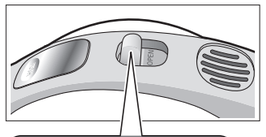

To Pour:

Slide the Double Safety Lock to the OPEN position (in Red).

After Pouring:

Slide the Double Safety Lock to the CLOSE position (in Blue).



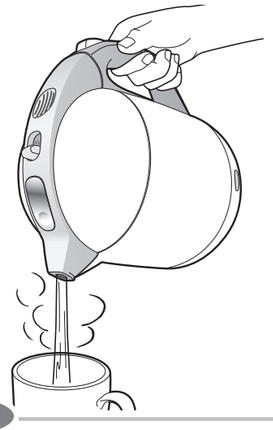

*You may hear some noise or small clicking sounds during and after use. This is due to the expansion or contraction of the plastic or metal parts due to heating or cooling, and does not indicate a malfunction.
*This product utilizes a mechanism which monitors the amount of steam to turn the power OFF. Condensation may occur and drip from the Handle. This is normal and does not indicate a malfunction.

NOTES

*Make sure that steam is not emitting from the Steam Vent before opening the Double Safety Lock to avoid scalding.
*Do not tilt, shake or tip the Body over as hot water may spill from the Spout even if the Double Safety Lock is at the CLOSE position.
*Do not open the Upper Lid immediately after boiling completes. Doing so may cause scalding.

DISPOSE WATER

Discard left over water after each use, emptying the Inner Container completely.

Remove the Body from the Power Base by holding the Handle and tilt it to discard hot water.

Make sure the Upper Lid is closed securely.

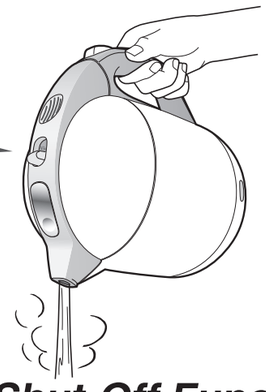

NOTES

*Do not plug or unplug the Power Plug or touch the Connector with wet hands. (Doing so may cause electric shock or injury.)
*Handle carefully to avoid loose water from splashing on your hands, etc. (Could cause scalding.)
*Do not allow hot water to splash on the Switch, Boil Light, Body or the bottom of the Body. (Doing so may cause scalding or breakdown.)
*Dispose the water at least once a day. (Leaving water in the Inner Container can accumulate scale.)

Automatic Shut-Off Function

The Automatic Shut-Off function activates to shut down power to the heater when the product is switched ON without filling the Inner Container with water, in order to prevent damage from overheating.

Remedy Allow the Inner Container to cool, fill with water then turn the Switch ON again.

CLEANING AND MAINTENANCE

All repairs and other services should be performed by an authorized service representative.

NOTES

*Do not use a thinner, benzene, abrasive cleansers or brushes (nylon/metal), bleach or anything that may damage the surface of the product. (May cause damages to the Inner Lid and the Inner Container.)
*Do not use a dishwasher for cleaning or drying. (May cause the plastic parts to deform.)
*Before storing the product for longer period of time, dry it completely and pack in a plastic bag to prevent odors from developing.
*Do not turn the product upside down if the bottom is wet. (Water may get inside the body and cause it to break or rust.)

Body/Upper Lid/ Power Base	Wipe clean with a damp well-wrung cloth.

*Never wash the product under running water, nor immerse it in water. Do not allow water to splash on the Receptacle and Connector. (Doing so may cause water to get inside the product, resulting in malfunction or rust.)

Inner Lid	Wipe with a soft wet sponge.
Inner Container	Perform the Citric Acid Cleaning (see p.12) periodically.

*Red rust-like spotting, milky white or black discoloration and filmy objects are caused by minerals in the water, not from discoloration or deterioration of the inner container itself. Although this is not a hygienic problem, it is recommended to perform the Citric Acid Cleaning periodically (every 1-3 months).
(The condition of the Inner Container will depend on local water quality and how often you boil water.)

Receptacle/Power Cord/ Connector	Wipe clean with a dry cloth.

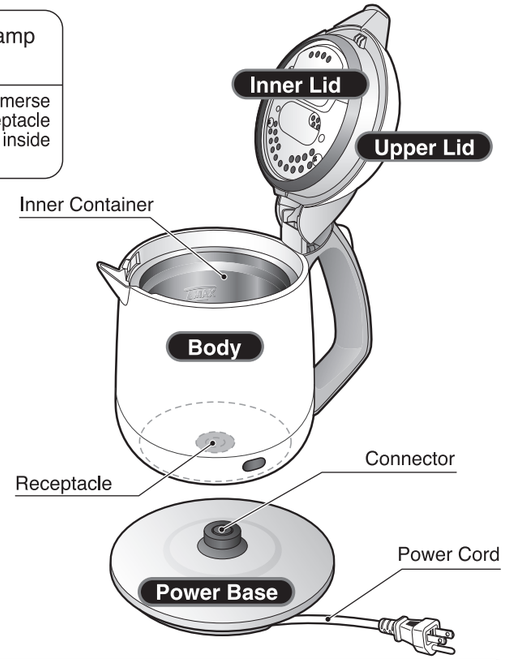

HOW TO REPLACE THE INNER LID GASKET

The Inner Lid Gasket may need to be replaced due to time and wear. Check it about once a year.

Wipe new Inner Lid Gaskets with a wet soft sponge before attaching to the Inner Lid.

To remove the Inner Lid Gasket

① Loosen the 4 screws.
② Remove the Inner Lid Gasket.

When the Inner Lid Gasket takes on a white discoloration. ▶ Please purchase and replace with a new one.

NOTE *Do not remove the screws from the Upper Lid to avoid losing them.

To attach the Inner Lid Gasket

① Fit the Gasket of the Inner Lid securely to the outer circumference as shown in the figure.
② Tighten the screws securely.

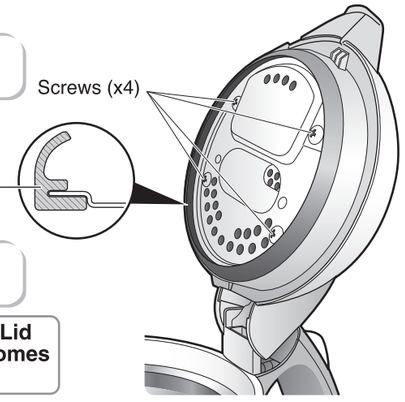

NOTE *If you remove the Inner Lid, be sure to reinstall it correctly.

Hot water may leak from the gap between the Upper Lid and the Body when tilted if the Inner Lid Gasket becomes old and turns white. This may result in scalds.

Perform every 1-3 month(s) of usage

HOW TO CLEAN THE INNER CONTAINER WITH CITRIC ACID (ACTIVATED DESCALING CLEANER)

NOTE In order to prevent gas bubbles and bubbling-over, the citric acid Activated Descaling Cleaner (Model No. ADC-05) is recommended for cleaning. To purchase this cleaner, please visit an authorized Zojirushi dealer or www.zojirushi.com.

1 **Put 30g of citric acid or 1 pack of Activated Descaling Cleaner (1 oz.) and add warm water to dissolve. Pour into the Inner Container and fill with water to the Maximum Water Level Line.**

2 **Close the Upper Lid, insert the Power Plug and press "|" to turn the Switch ON to boil. Leave it to soak for about 2 hours.**

3 **Pour the water out.**

4 **Fill with fresh water, boil again and pour it out to rinse.**

NOTES
- *Do not fill over the Maximum Water Level Line. (Hot water may spill out, resulting in scalds.)
- *Repeated citric acid cleaning might be necessary for hard- to-remove residues.

*If Alkalized Ionic Water is used, calcium will tend to build up on the surface of the Inner Container. If scale accumulates on the Inner Container, boiling may become louder than usual and water may not dispense smoothly.

*If the water is accidentally ingested during citric acid cleaning, please follow the directions on the package of the citric acid cleaner.

REPLACEMENT PARTS & OTHER ITEMS

*Replacement parts may be available for an additional charge. Please replace damaged parts only with new parts.

*When replacing parts, please record the model number and part name beforehand. Then contact either the store where you purchased the product or Zojirushi Customer Service.

Part Name	Part Number
Inner Lid Gasket	BF296022M
Activated Descaling Cleaner (1 oz.)	ADC-05

Zojirushi Customer Service
(800)733-6270
www.zojirushi.com

SPECIFICATIONS

Model No.	CK-BAC10			
Capacity	1.0 liter			
Rating	AC 120V 1300W 60Hz			
Power Cord	2.5 feet (0.75 m)			
External Dimensions (inches)	Body Only	9-1/2(W) x 6-1/2(D) x 8-3/4(H)	With Power Base	9-1/2(W) x 6-3/4(D) x 9-1/2(H)
Weight		Approx. 2.4 lbs. (1.1 kg)		Approx. 3.1 lbs. (1.4 kg)

*In high altitudes or severely cold areas, the product may not perform as specified. Avoid using the product in such areas or in other extreme conditions.

TROUBLESHOOTING GUIDE

Please check the following points before calling for service.

Condition	Cause	Remedy
Power does not turn on. Boil Light does not turn on.	Power Plug is not connected to an electrical outlet.	Connect the Power Plug.
	The Body is not set correctly on the Power Base.	Set it correctly.
	The Switch is not ON at the " | " position.	Turn the Switch ON to the "|" position.
	Metal flakes or dusts have accumulated on the Connector.	Remove metal flakes or dusts.
Water pours out by itself from the Spout or Steam Vent.	Check that the Inner Container is not filled over the Maximum Water Level Line.	Pour out the excess water until it is below the Maximum Water Level Line.
There is a noise when pouring water or opening and closing the Upper Lid.	This sound is normal and comes from the movement of the weight which prevents hot water from spilling when the kettle is accidentally tipped over.	This does not indicate a malfunction.
There is a noise during and after use.	This is due to the expansion or contraction of the plastic or metal parts due to heating or cooling, and does not indicate a malfunction.	This does not indicate a malfunction. See pg.10.
Water is dripping from the bottom of the Handle.	*This product utilizes a mechanism which monitors the amount of steam to turn the power OFF. Condensation may occur and drip from the Handle. This is normal and does not indicate a malfunction. See pg.10.	

The plastic part of the Upper Lid:

*The plastic part of the Upper Lid may deteriorate over use. If discoloration occurs or the surface becomes coarse, replace the Upper Lid (additional charges will apply).